

SCORETEC Score Clock Instructions

To Clean The Board at thte Beginning of Game:

Make sure the clock is in game Mode. If not press: GAME MODE: Then press: CLEAR.
Hold for 5 seconds.

To Set The Game Time:

Press: ENTER - 15:00 - CLOCK SET (Any amount of time can be inputed)

To Enter The Score:

Press: ENTER - 1 - SCORE on the correct side (Home/Away)
For the next goals simply press: Score on the correct side (Home / Away)

To Correct The Score:

Press: Enter - NUMBER OF GOALS - SCORE on the correct side (Home / Away)

To Set a Penalty:

Press: ENTER - 2:00 - HOME / AWAY PENALTY (1 will show on display)

To Set Second Penalty:

Press: HOME / AWAY PENALTY. Penalty 2 will show on display with 0:00 time.
Press: ENTER - 2:00 - HOME AWAY / PENALTY.
Penalty 2 will be displayed.

To Cancel a Penalty:

Press HOME / AWAY PENALTY until the penalty in question is displayed on the LCD.
Press: ENTER - 0 - HOME / AWAY PENALTY.